


Roof trim

Tools

Required special tools, workshop equipment, testing and measuring equipment, and aids

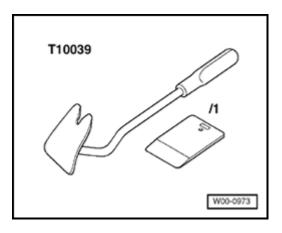


■ Release lever T10039

Headliner with sliding/tilt sunroof, removing and installing

Removing


- Switch ignition off.
- Remove upper A-pillar trims \Rightarrow 70-3, Upper A-pillar trim, removing and installing .
- Remove upper C-pillar trims \Rightarrow 70-3, Upper C-pillar trim, removing and installing .
- Remove sun visors \Rightarrow 68-2, Sun visor, removing and installing .

Roof trim Page 2 / 5

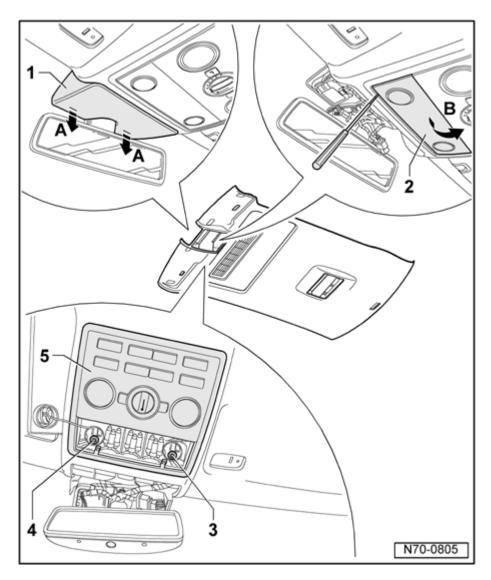


- Pull cover 1 in direction of arrows
 A out of the locking tabs.
- Using a small screwdriver, unclip the cover 2 in direction of arrow B .
- Remove bolts **3** and **4** (1.5 Nm).
- Remove the front illumination and control unit 5 from the headliner and disconnect the wiring harnesses.

Roof trim Page 3 / 5

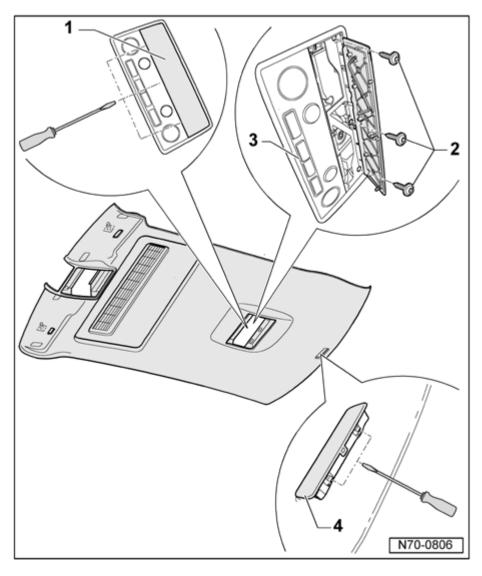


- Using a small screwdriver, release the locking tabs of the cover 1 .
- Remove three bolts 2 (1.5 Nm).
- Remove the rear illumination and control unit 3 from the headliner and disconnect the wiring harnesses.
- Using a small screwdriver, release the locking tabs from the parking assist system warning buzzer 4 and disconnect the wiring harnesses.

Roof trim Page 4 / 5

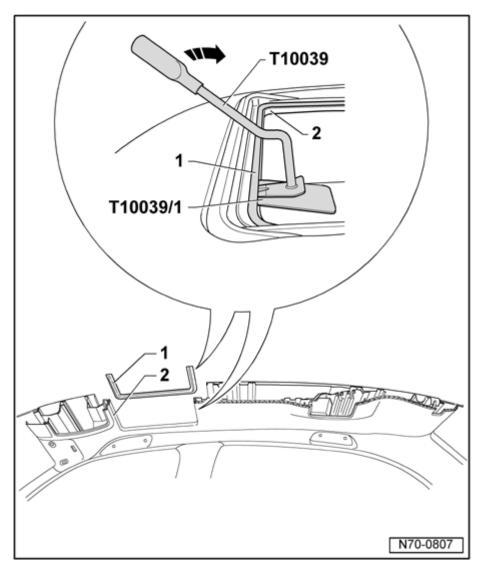

- Push the Wedge T10039/1 between frame 1 and headliner 2 .
- Using the Release lever T10039 , separate the frame in direction of arrow from the headliner, the whole way around.

Roof trim Page 5 / 5

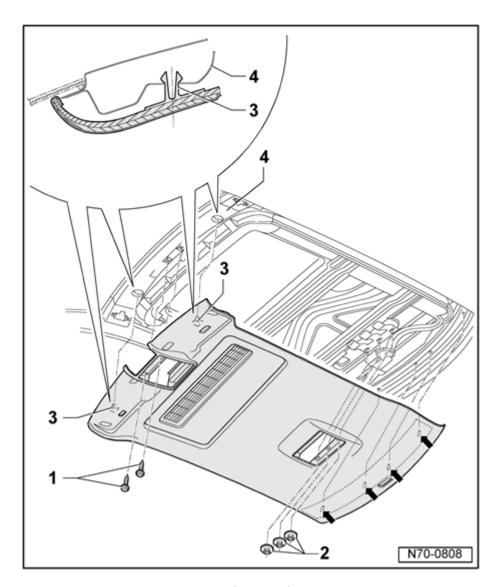

- Remove the two bolts 1 (1.5 Nm).
- Remove three nuts 2 (1.5 Nm).
- Release the centering tabs on the left and right of headliner 3 from the roof crossmember 4 .
- Near the rear window, the headliner is attached with four clips **arrows** to the roof crossmember. Release the headliner in this area.
- Adjust the front seatbacks as low as possible and remove the headliner from the vehicle through the rear door with the help of a second technician.

Installing

- Installation is performed in the reverse order of removal.