



## Rear shelf

### Upper rear shelf, removing and installing

#### Removing

##### 4-seater


- Remove rear seat cushion, 10-way seat Page ⇒ [72-2, Rear seat cushions, 10-position seat, removing and installing](#) .
- Remove rear seat backrest, 10-way seat Page ⇒ [72-2, Rear seat backrest, 10-position seat, removing and installing](#) .

##### 5-seater


- Remove rear seat cushion, 5-seater ⇒ [72-2, Rear seat cushion, 5-seater, removing and installing](#)
- Remove rear seat backrest, 5-seater ⇒ [72-2, Rear seat backrest, 5-seater, removing and installing](#)

#### All vehicles

- Remove upper C-pillar trim ⇒ [70-3, Upper C-pillar trim, removing and installing](#) .
- Remove lower C-pillar trim ⇒ [70-3, Lower C-pillar trim, removing and installing](#) .
- Remove bolts for lower rear shelf ⇒ [70-4, Lower rear shelf, removing and installing](#) .

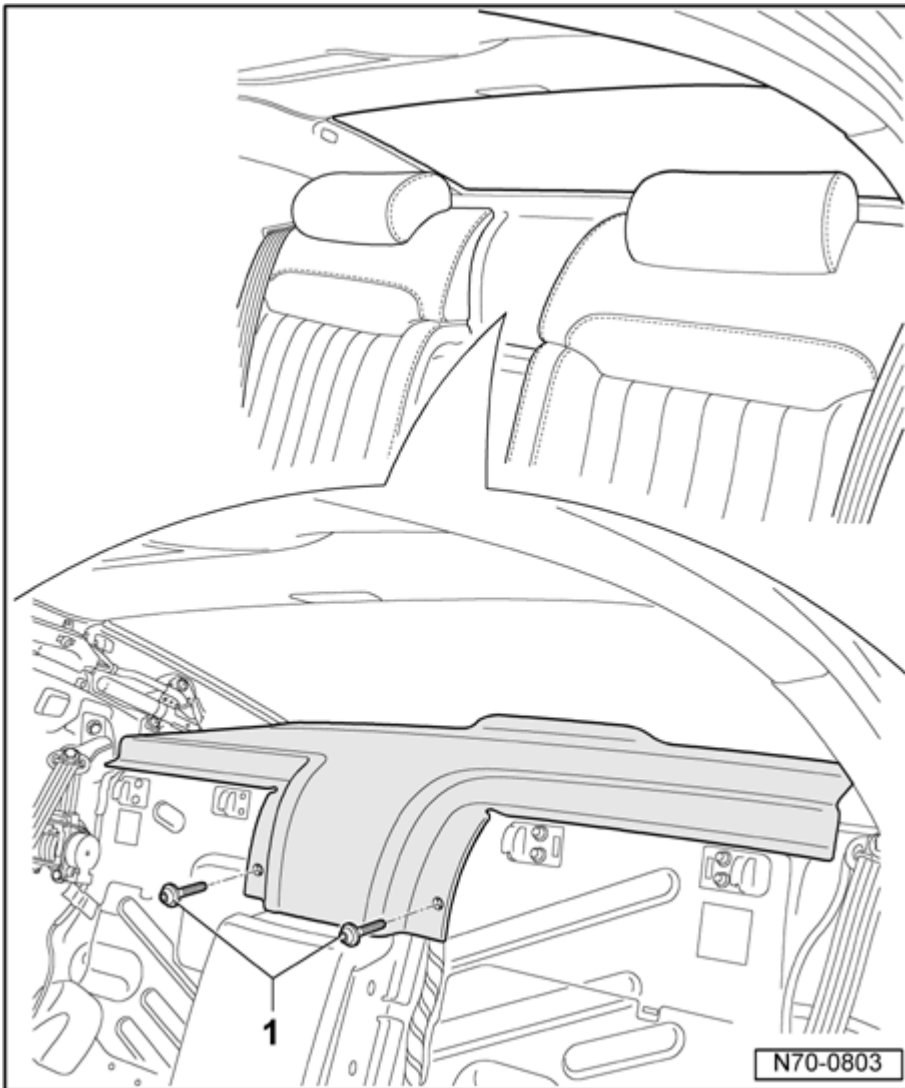

- Remove the two bolts - **1** - (1.5 Nm).

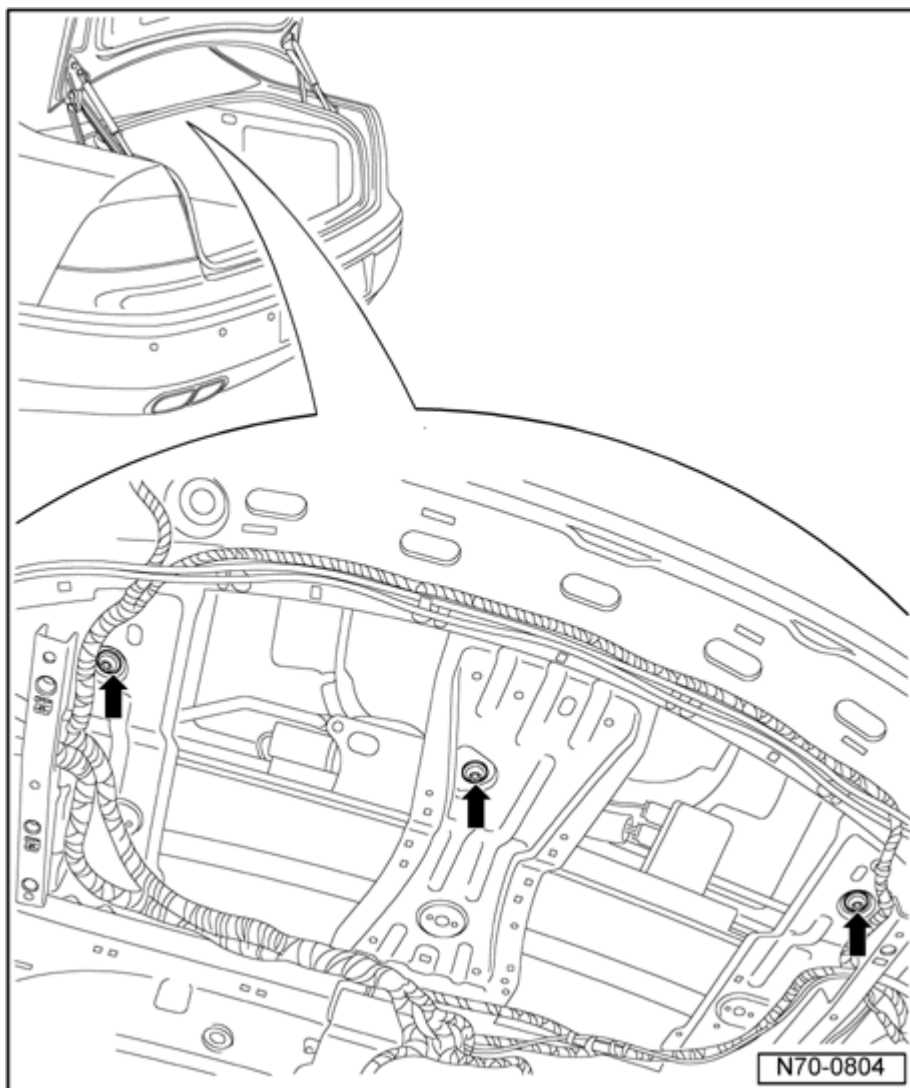

- Remove the three bolts - **arrows** - (3.5 Nm).

- Remove the rear shelf from the vehicle.


#### **Installing**

- Installation is performed in the reverse order of removal.

#### **Lower rear shelf, removing and installing**

#### **Removing**

- Switch ignition off.

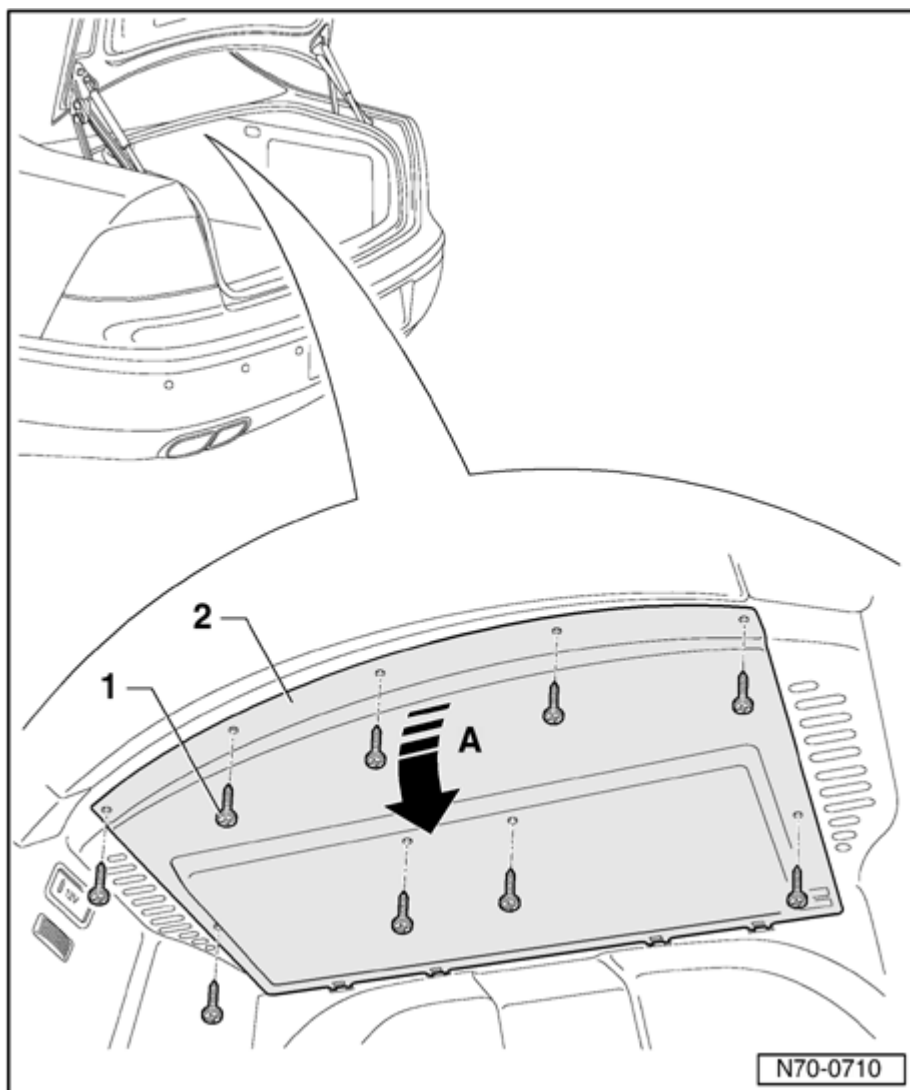

- Remove bolts - **1** - (Qty. 9) (1.5 Nm).

**Note :**


- *Bolts of differing lengths are installed. When installing, pay close attention to the correct installed location of the bolts.*

- Pull out the lower rear shelf - **2** - from the mountings - **arrow A** - .

- Disconnect the connectors from the electrical components in the lower rear shelf, if equipped.

**Note :**

- *In order to ensure correct harness installation, it is necessary to mark the separated connectors.*

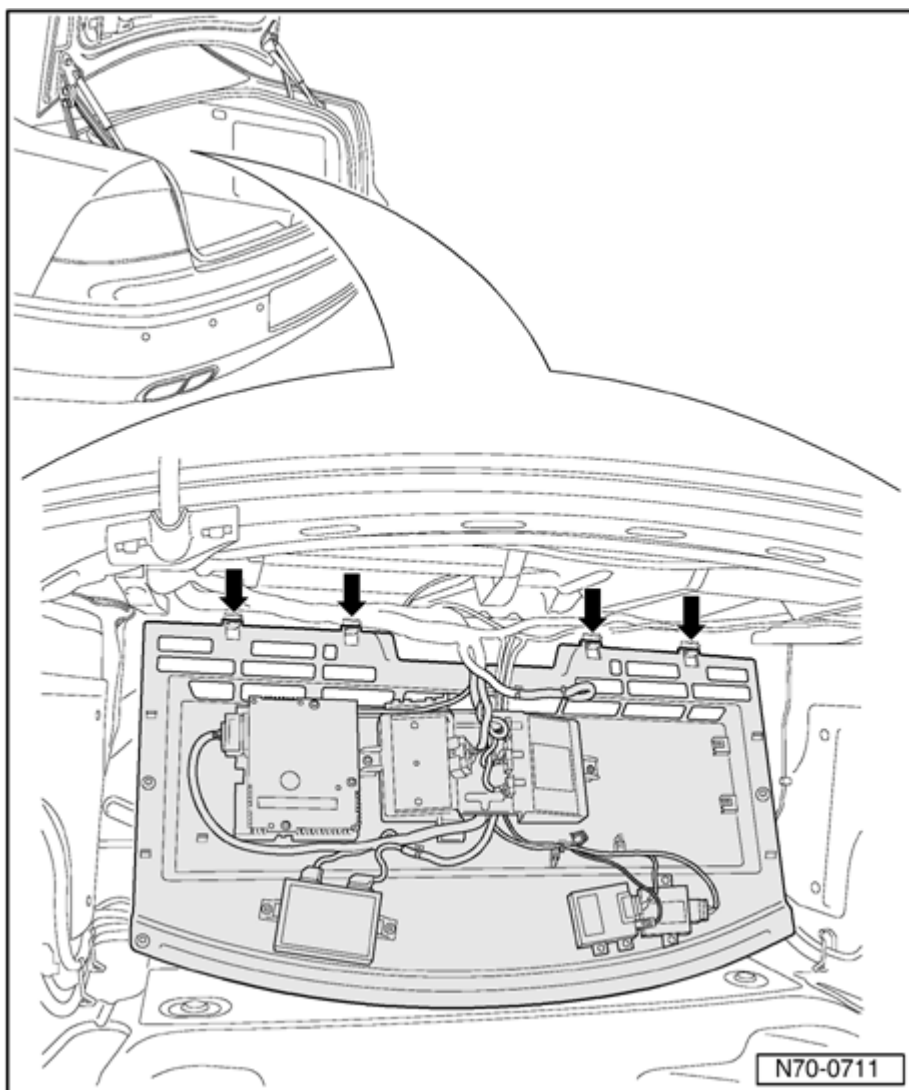

- Remove lower rear shelf from the mountings - **arrows** - .

### Installing

- Installation is performed in the reverse order of removal.